


**Tav. 16a** SUPPORTI SEDILE  
SEAT SUPPORTS

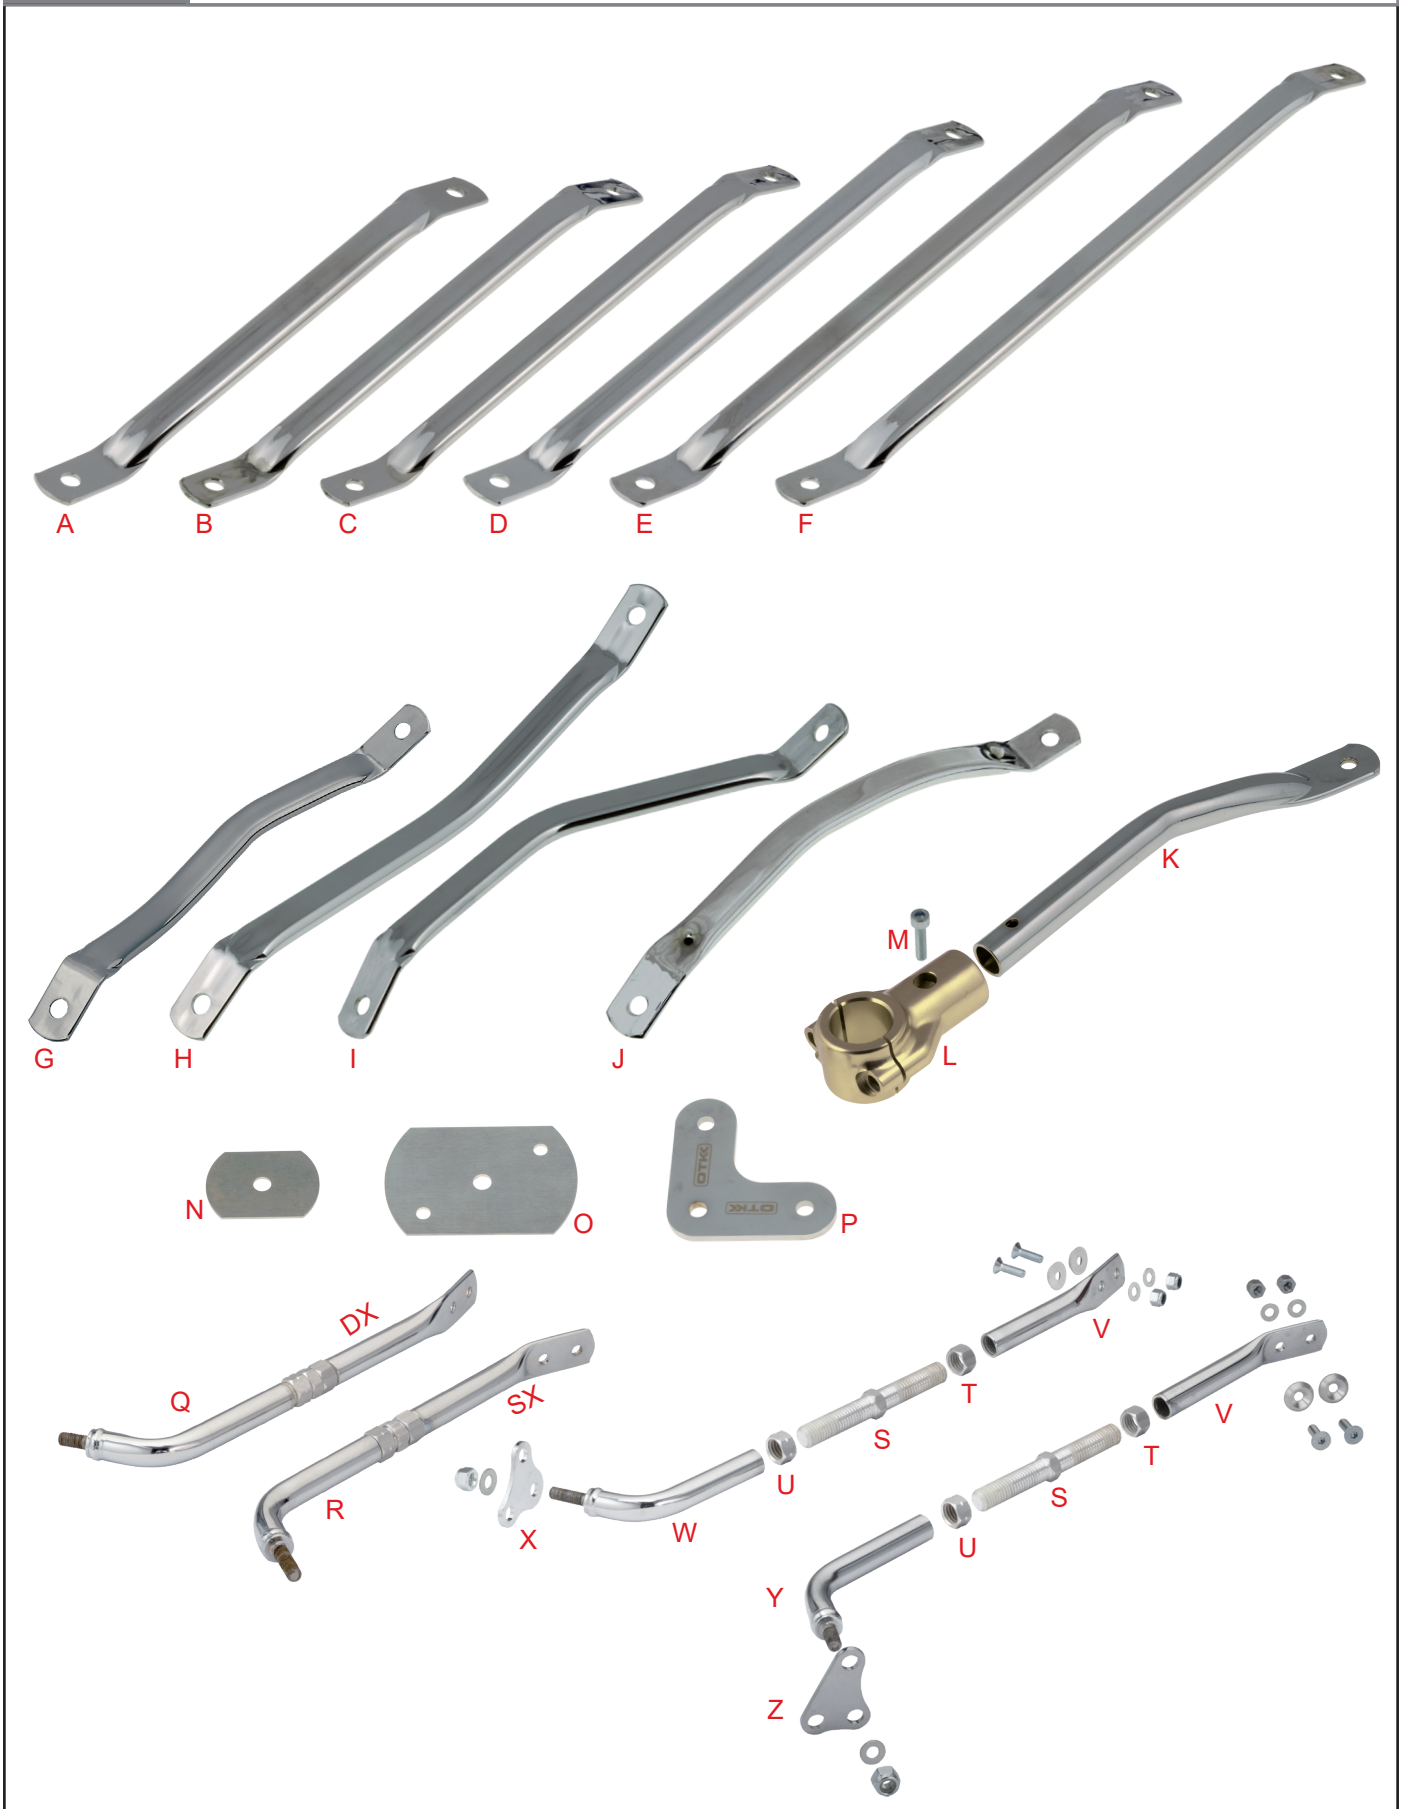

Rif.	SEAT SUPPORTS		¥
16a		Description	Tax included
A	0006.280	シートサポ <sup>°</sup> ト 280mm	Additional seat support L. 280 mm 4,180
B	0006.300	シートサポ <sup>°</sup> ト 300mm	Additional seat support L. 300 mm 4,180
C	0006.320	シートサポ <sup>°</sup> ト 320mm	Additional seat support L. 320 mm 4,180
D	0006.340	シートサポ <sup>°</sup> ト 340mm	Additional seat support L. 340 mm 4,180
E	0006.380	シートサポ <sup>°</sup> ト 380mm	Additional seat support L. 380 mm 4,180
F	0006.400	シートサポ <sup>°</sup> ト 400mm	Additional seat support L. 400 mm 4,180
G	0007.300B	シートサポ <sup>°</sup> ト 2 BENT 300mm/KZ/R	Additional seat support L. 300 mm with 2 bends - for KZ right 5,060
H	0007.340	シートサポ <sup>°</sup> ト BENT 340mm	Bent additional seat support L. 340 mm 4,730
I	0007.320	シートサポ <sup>°</sup> ト BENT 320mm/ROK	Right bent additional seat support L. 320 mm Rok 4,730
J	0007.320B	シートサポ <sup>°</sup> ト 2 BENT 320mm	Additional seat support L. 320 mm with 2 bends 5,060
K	0237.A0	クランプ <sup>°</sup> 用シートサポ <sup>°</sup> ト	Dismountable seat support 4,730
L	0259.B0	サポ <sup>°</sup> トクランプ <sup>°</sup> D.28	Locker Ø 28 mm for AL dismountable seat support 17,820
L	0259.A0	サポ <sup>°</sup> トクランプ <sup>°</sup> D.30	Locker Ø 30 mm for AL dismountable seat support 17,820
M	V.TCE6X25	キャップ <sup>°</sup> ボ <sup>°</sup> ルト 6X25	TCEI screw 6x25 mm 44
N	0239.0A	リ <sup>°</sup> ン <sup>°</sup> フ <sup>°</sup> ォ <sup>°</sup> ス <sup>°</sup> シ <sup>°</sup> ト <sup>°</sup> プ <sup>°</sup> レ <sup>°</sup> ー <sup>°</sup> ト	Small seat stiffener-plate 913
O	0239.00	リ <sup>°</sup> ン <sup>°</sup> フ <sup>°</sup> ォ <sup>°</sup> ス <sup>°</sup> シ <sup>°</sup> ト <sup>°</sup> プ <sup>°</sup> レ <sup>°</sup> ー <sup>°</sup> ト Big	Big seat stiffener-plate 660
P	0239.A0	OTK エク <sup>°</sup> ス <sup>°</sup> テ <sup>°</sup> ン <sup>°</sup> シ <sup>°</sup> ョ <sup>°</sup> ン <sup>°</sup> シ <sup>°</sup> ト <sup>°</sup> サ <sup>°</sup> ポ <sup>°</sup> ト	Seat support extension-plate 3,960
Q	0006.B0DXKIT	OTK ア <sup>°</sup> ジ <sup>°</sup> ャ <sup>°</sup> ス <sup>°</sup> タ <sup>°</sup> フ <sup>°</sup> ル <sup>°</sup> シ <sup>°</sup> ト <sup>°</sup> サ <sup>°</sup> ポ <sup>°</sup> ト (R)	Complete right additional adjustable seat support 20,240
R	0006.B0SXKIT	OTK ア <sup>°</sup> ジ <sup>°</sup> ャ <sup>°</sup> ス <sup>°</sup> タ <sup>°</sup> フ <sup>°</sup> ル <sup>°</sup> シ <sup>°</sup> ト <sup>°</sup> サ <sup>°</sup> ポ <sup>°</sup> ト (L)	Complete left additional adjustable seat support 20,240
S	0006.B1	OTK ア <sup>°</sup> ジ <sup>°</sup> ャ <sup>°</sup> ス <sup>°</sup> タ <sup>°</sup> フ <sup>°</sup> ル <sup>°</sup> シ <sup>°</sup> ト <sup>°</sup> サ <sup>°</sup> ポ <sup>°</sup> ト シ <sup>°</sup> ョ <sup>°</sup> イ <sup>°</sup> ン <sup>°</sup> ト	Threaded pin for adjustable seat support 5,060
T	0006.B2	OTK ア <sup>°</sup> ジ <sup>°</sup> ャ <sup>°</sup> ス <sup>°</sup> タ <sup>°</sup> フ <sup>°</sup> ル <sup>°</sup> シ <sup>°</sup> ト <sup>°</sup> サ <sup>°</sup> ポ <sup>°</sup> ト ナ <sup>°</sup> ツ <sup>°</sup> ト (R <sup>°</sup> ネ <sup>°</sup> ジ <sup>°</sup> )	Right nut M14 x 2 for adjustable seat sup-port 946
U	0006.B3	OTK ア <sup>°</sup> ジ <sup>°</sup> ャ <sup>°</sup> ス <sup>°</sup> タ <sup>°</sup> フ <sup>°</sup> ル <sup>°</sup> シ <sup>°</sup> ト <sup>°</sup> サ <sup>°</sup> ポ <sup>°</sup> ト ナ <sup>°</sup> ツ <sup>°</sup> ト (L <sup>°</sup> ネ <sup>°</sup> ジ <sup>°</sup> )	Left nut M14 x 2 for adjustable seat support 946
V	0006.B4	OTK ア <sup>°</sup> ジ <sup>°</sup> ャ <sup>°</sup> ス <sup>°</sup> タ <sup>°</sup> フ <sup>°</sup> ル <sup>°</sup> シ <sup>°</sup> ト <sup>°</sup> サ <sup>°</sup> ポ <sup>°</sup> ト (ア <sup>°</sup> ッ <sup>°</sup> パ <sup>°</sup> ー)	Adjustable support fastened to the seat 4,730
W	0006.B5A	OTK ア <sup>°</sup> ジ <sup>°</sup> ャ <sup>°</sup> ス <sup>°</sup> タ <sup>°</sup> フ <sup>°</sup> ル <sup>°</sup> シ <sup>°</sup> ト <sup>°</sup> サ <sup>°</sup> ポ <sup>°</sup> ト (R/ロ <sup>°</sup> ア <sup>°</sup> )	Right support fastened to the bearing carrier support 6,930
X	0006.B6B	OTK ア <sup>°</sup> ジ <sup>°</sup> ャ <sup>°</sup> ス <sup>°</sup> タ <sup>°</sup> フ <sup>°</sup> ル <sup>°</sup> シ <sup>°</sup> ト <sup>°</sup> サ <sup>°</sup> ポ <sup>°</sup> ト プ <sup>°</sup> ラ <sup>°</sup> ケ <sup>°</sup> ッ <sup>°</sup> ト (R)	Small platefor right adjustable seat support 2,530
Y	0006.B5C	OTK ア <sup>°</sup> ジ <sup>°</sup> ャ <sup>°</sup> ス <sup>°</sup> タ <sup>°</sup> フ <sup>°</sup> ル <sup>°</sup> シ <sup>°</sup> ト <sup>°</sup> サ <sup>°</sup> ポ <sup>°</sup> ト (L/ロ <sup>°</sup> ア <sup>°</sup> )	Left support fastenedto the bearing carrier support 6,930
Z	0006.B6C	OTK ア <sup>°</sup> ジ <sup>°</sup> ャ <sup>°</sup> ス <sup>°</sup> タ <sup>°</sup> フ <sup>°</sup> ル <sup>°</sup> シ <sup>°</sup> ト <sup>°</sup> サ <sup>°</sup> ポ <sup>°</sup> ト プ <sup>°</sup> ラ <sup>°</sup> ケ <sup>°</sup> ッ <sup>°</sup> ト (L)	Small plate for left adjustable seat support 2,530